

4750	○	○			★	★										
5000	○	○	○	○	★	★	★	★	★							
5250	○	○			★	★										
5500	○	○	○	○	★	★	★	★								
5750	○	○			★	★										
6000	○	○	○	○	★	★	★	★	★	★	★	★				
6250	○	○			★	★										
6500	○	○	○	○	★	★	★	★								
6750	○	○			★	★										
7000	○	○	○	○	★	★	★	★	★							
7250	○	○			★	★										
7500	○	○	○	○	★	★	★	★								
7750	○	○			★	★										
8000	○	○	○	○	★	★	★	★	★		★	★				

Clean the primary filter when the maintenance indicator of the air filter displays red sign, Replace the primary and safety filter (no matter how long it has run) if it has been cleaned four times or more. and switch off the battery connection before replace any spare parts.

NOTICE:

- 1.O=Check; ★= Replace.
- 2.* means that if fuel–water separator/ safety element of air filter is applied, perform its maintenance.
- 3.If it is not often used, or alternatively operates for a small amount of time each use, spare parts should be performed once at least every two years.
- 4.Above maintenance intervals should be shortened if the machine is often used in extreme environment.
- 5.Record every maintenance information with the date, actual running hours, stamp, signature/ stamp, signature/stamp, and remark. And mark the maintenance position on the table with “√”, meantime, write all information into the maintenance record manual.